


Roller Blinds


Fitting Instructions

STEP 1

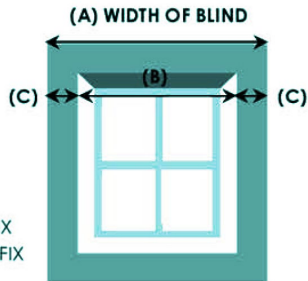


STEP 2

Hold each bracket into place and mark the hole positions. Fit each bracket using 2 screws provided.

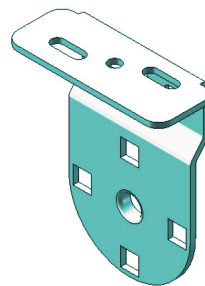

Top fixing

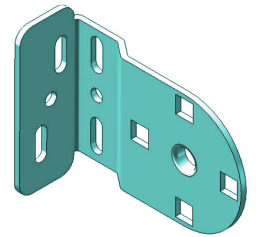

Face fixing


Outside Recess

If the blind is to be fitted outside the window ensure that measurement C is the same. C is simply equal to A minus B, divided by two. Follow instructions for FACE FIXING.


Inside Recess

If TOP FIXING, fix to the lintel if the window frame is uPVC or if there are no obstructions. If FACE FIXING, fit bracket to the window frame.

STEP 3

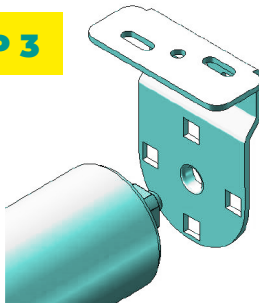


Holding the fully-wound blind, insert the idle pin end into the bracket as shown.

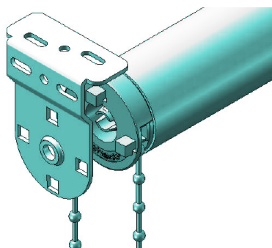

With the idle pin end in place, insert the control end into the opposite bracket. Ensure that the blind has clicked into place using the centre lug.

STEP 4

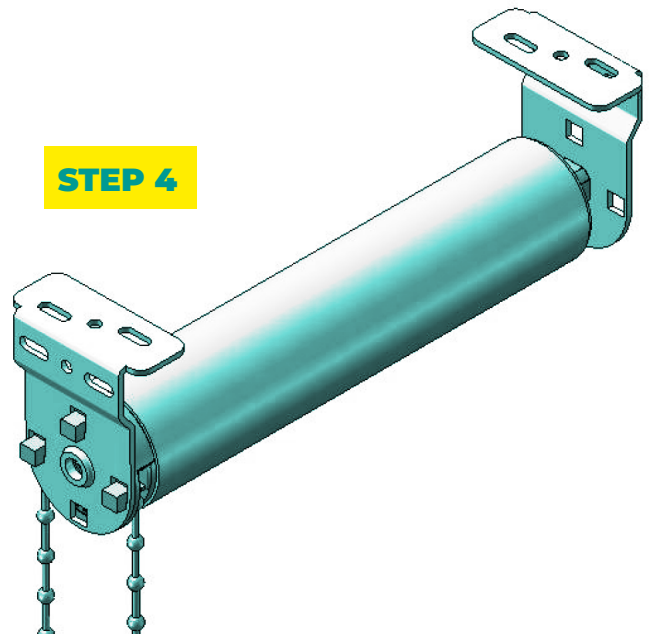

WARNING

Where possible blind chain should be operated from just above the chain connector as this puts less pressure on this component, reducing the risk of snapping or pulling apart.