


Blinds


measurement instructions

Recess Fitting ? Easy !

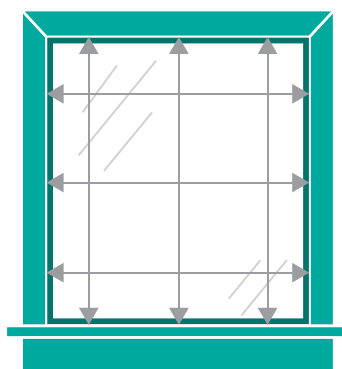

- 1 Measure in 3 places for both the width and the drop, use the smallest measurements.
- 2 Don't make any deductions, we will do that for you to ensure your blind fits perfectly.
- 3 Start imagining your perfect window decoration...
- 4 Clip roller blind : measure the width of the glass part and add 5cm to the width. The drop is the total height of the movable window frame.

Exact fitting : not harder !

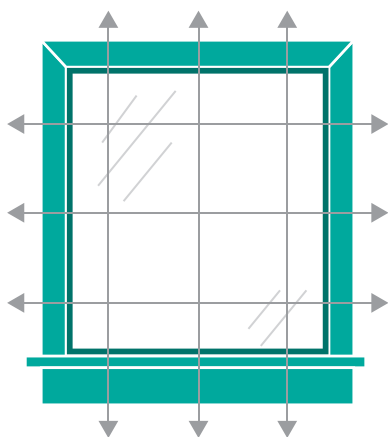

- 1 Measure the exact width of the area you would like the blind to overlap. To minimize light leakage we recommend that the blind overlaps the window recess by at least 8cm at the top and 12cm to the width.
- 2 The overlap at the bottom of the blind is a matter of personal choice but please take into account obstacles as radiators, cupboards...
- 3 If you are replacing an existing blind with one of the same size, simply measure the blind and specify "blind size" and we'll make you the same size.

Top tip

Don't forget with wooden or faux wood blinds that the slats form a package in pulled up position! If you want to open your window to the inside...